


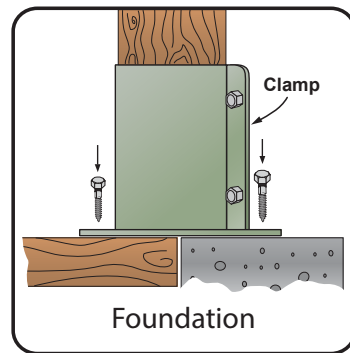

## BOLT DOWN - Instructions

### See warning before use

1. Place into position and mark location of 4 holes.  
For wood foundations, drill pilot holes.  
For concrete foundations, drill holes and install concrete anchors.
2. Bolt into position with suitable fasteners\* (*not included*).
3. Insert post (*not included*) into holder and tighten clamping device  
- do not over tighten.



**⚠WARNING** Always comply with all applicable building codes. Before using this product, ensure foundation is suitable. Not suitable for all applications or any commercial use. Do not overload. Always wear protective attire and eyewear. Wear protective attire and eyewear. No Peak company shall be liable for any loss or damage resulting from the improper installation or use of this product. If any Peak company becomes liable for any loss or damage, the aggregate liability of the Peak company shall be limited to the retail purchase price of this product. \* Only use fasteners suitable for your application.